


PROCEDURE OF THE IRISTOP



First stage

To pose vertically the glass iridescent on a support.

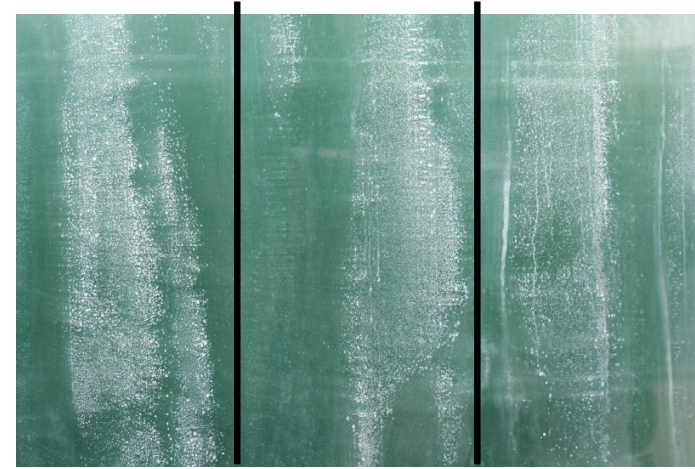

Second stage:

To divide the surface with a felt in three parts to delimit applications




PRECISION:

To pulverize horizontally and from top to bottom the product IRISTOP.
The chemical reaction on the glass is done immediately.

not to apply the product IRISTOP in the sun and in a temperature higher than 30.

The residual traces will be eliminated with the product RENUGLASS at the next stage.

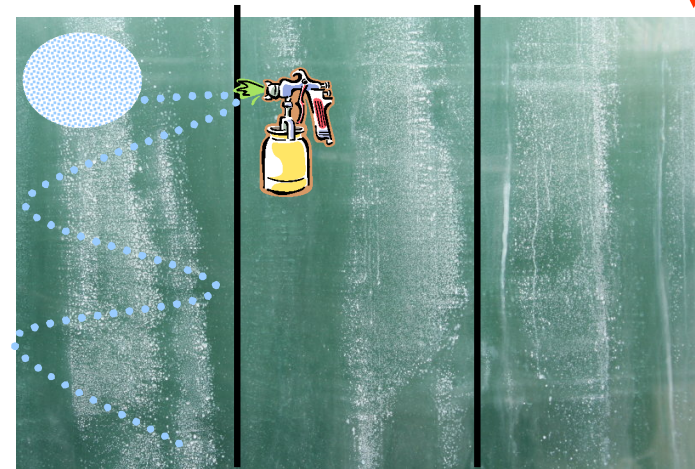

Third stage

- 1- to apply the product IRISTOP in the pulverizer.
- 2- To pulverize IRISTOP as the first diagram.
- 3- To apply the product on the first zone with a sponge.
- 4- After 15 seconds to rinse with clear water.
- 5- To carry out this operation on the zones 2 and 3.

Fourth stage

If there still traces of irisation to repeat operations 1-2-3.

CAUTION:

TO ONLY TWICE APPLY THE PRODUCT IRISTOP TO THE SAME SURFACE