


PROCEDURE OF THE RENUGLASS



First stage
To divide the surface with a felt-tip pen in three parts to delimit the applications.
This method makes the application easier .

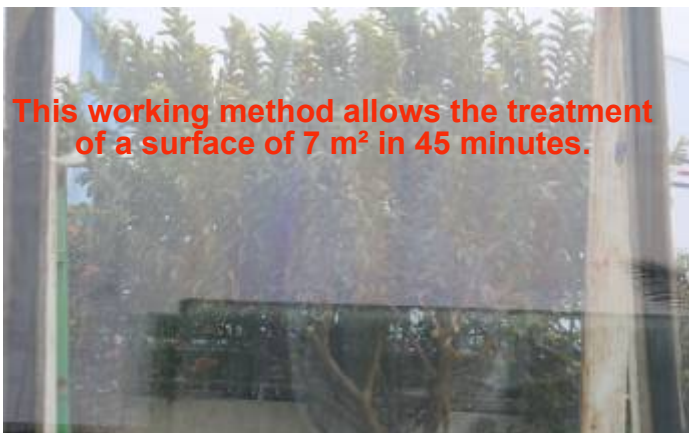

This working method allows the treatment of a surface of 7 m² in 45 minutes.

Apply the product RENUGLASS on the felt and pose the machine on glass before the powering.
Spread the product on the surface to be treated then put the machine under tension at the speed 1 (to avoid the splashes).
Carry out the movement slowly as the diagram above until there is no more traces of the product.
Repeat this operation on the whole of glass.
To eliminate the white powder rinse with clear water.
Wipe with a scraper of window cleaner.